

## Stinson Reliant SR-9 INSTRUCTION SHEET





Popular 1937 Gullwing Personal Plane


## **IMPORTANT! READ THESE POINTS BEFORE YOU BEGIN**


- "TEST FIT" all parts before cementing.


  Trim excess plastic from parts before joining.
- Cement all parts unless otherwise indicated by the instructions.
- Use paint and cement made for styrene plastic only.
- Paint all sub-assemblies before attaching parts.
- Scrape paint away from surfaces to be cemented together.
- Follow all of the numbers on the instruction sheet beginning with number one.

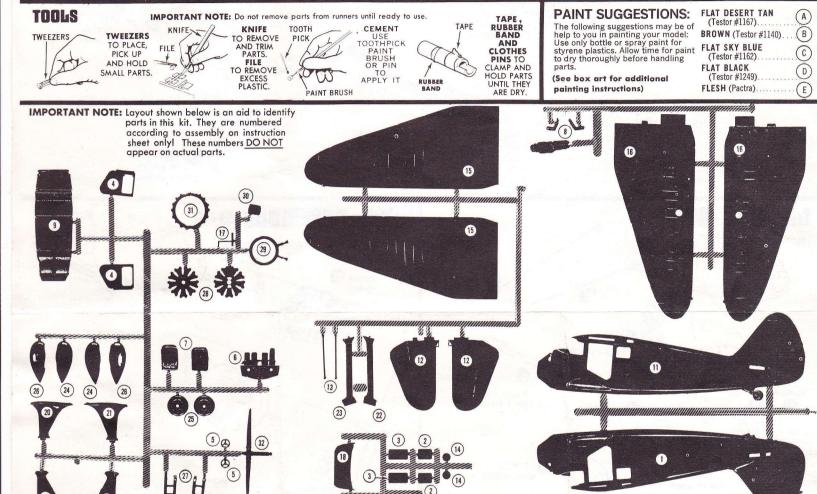


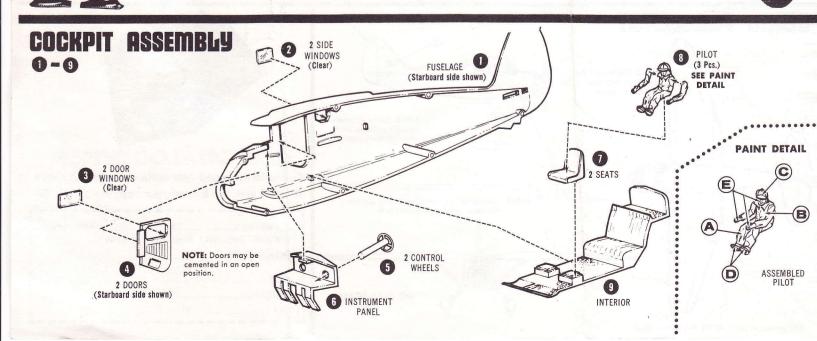

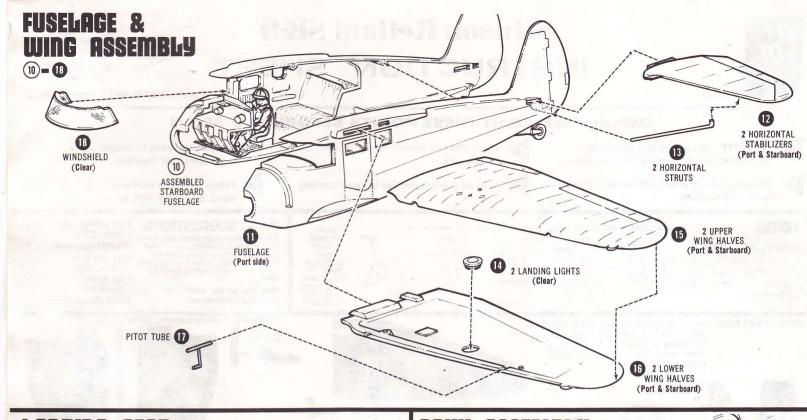

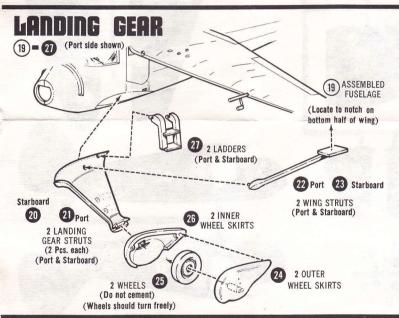

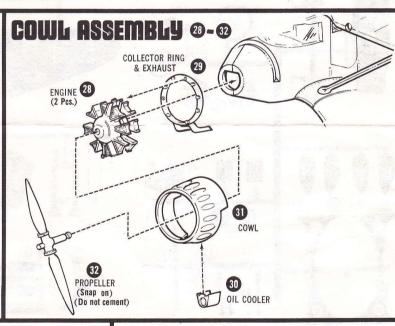

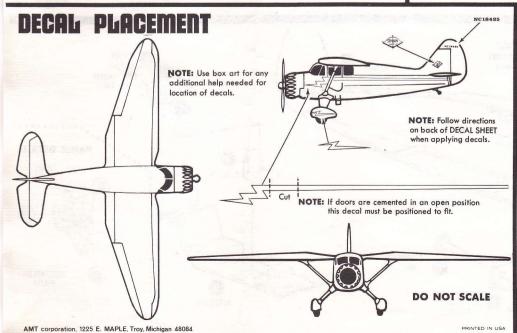



## NEW CATALOG OFFER!

Our colorful brand-new edition shows the entire AMT kit line. We'll send your copy for only \$1.00

I am enclosing \$	for	of AMT'S catalog
Send to AMT Corp., 122	5 E. Maple, Troy, M	ich. 48084.
(PLEASE PRINT)	334	
NAME	The state of the s	
ADDRESS		
CITY	STATE	ZIP